




Huawei P9 Lite Front Camera Replacement

Replace the front camera in your Huawei P9 Lite

Written By: Tobias Isakeit

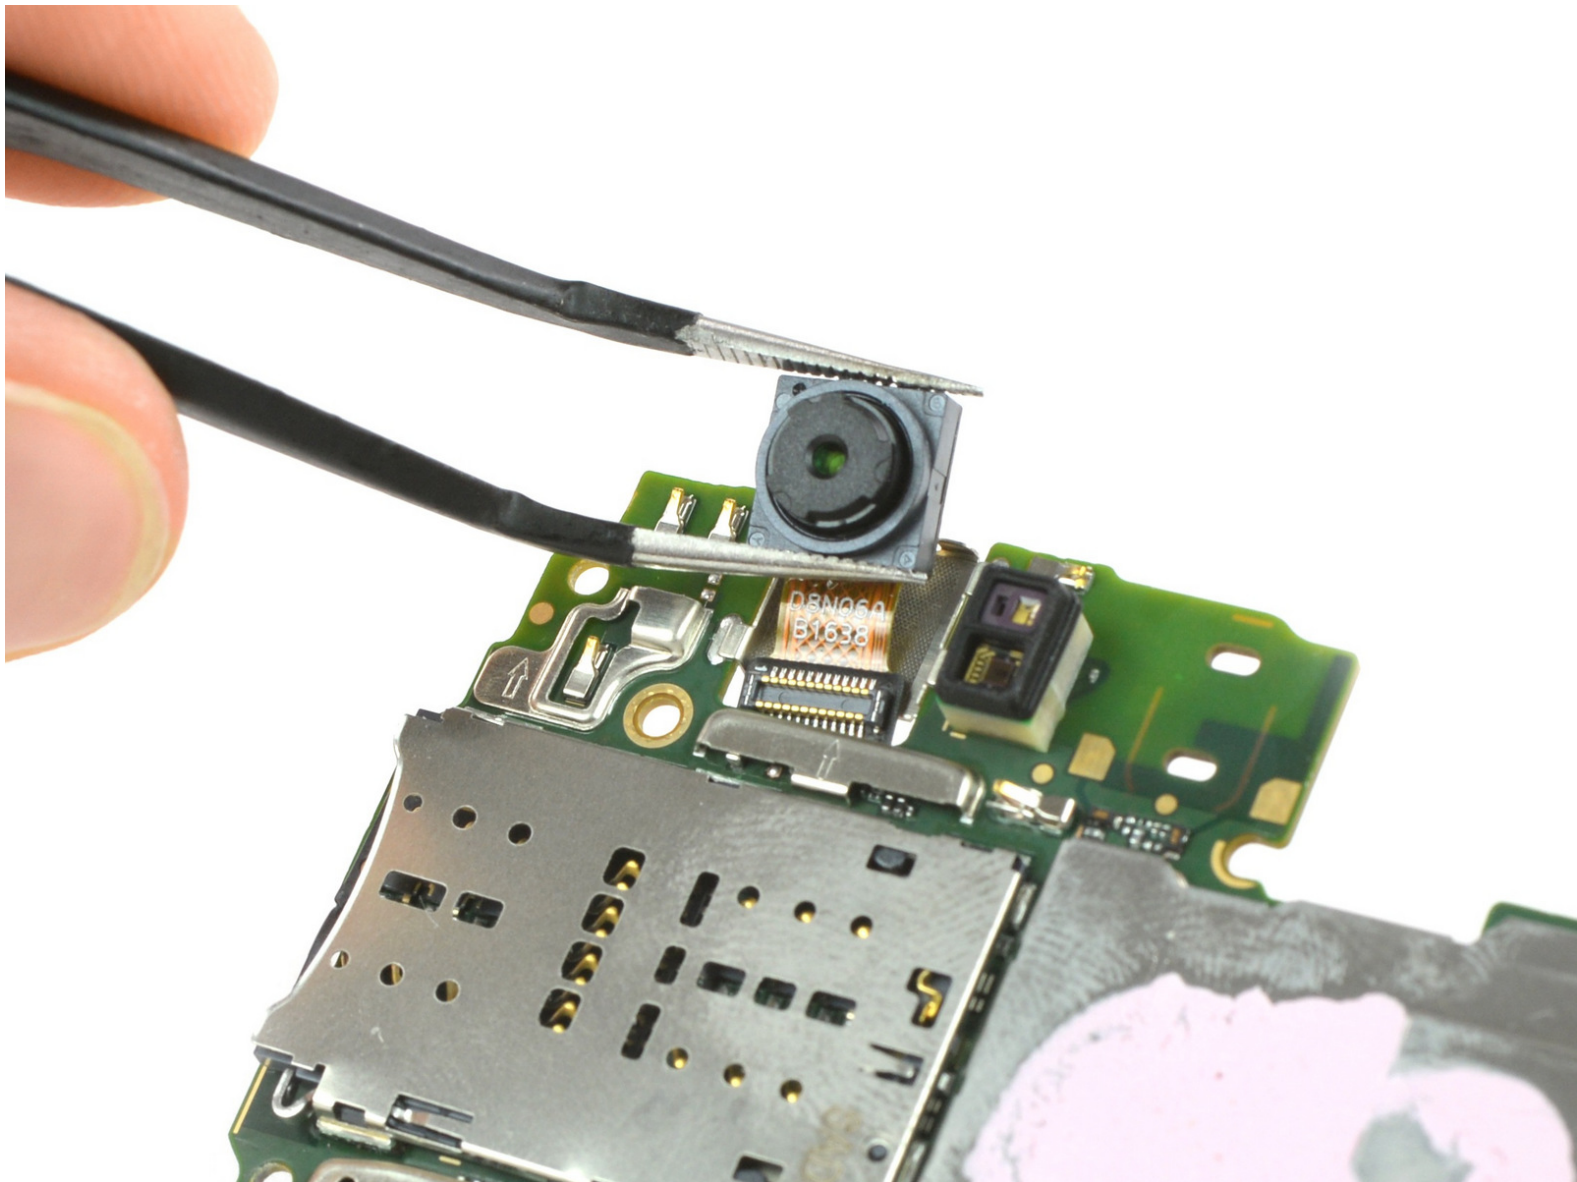

INTRODUCTION

Use this guide to replace the front camera in your Huawei P9 Lite.



TOOLS:


- [iFixit Opening Picks set of 6](#) (1)
 - [Plastic Cards](#) (1)
-

Step 1 — Back Cover




- Start on the bottom left corner of the back cover with an opening pick.
- Work your way around counterclockwise and carefully pry the plastic tabs open one by one.

Step 2

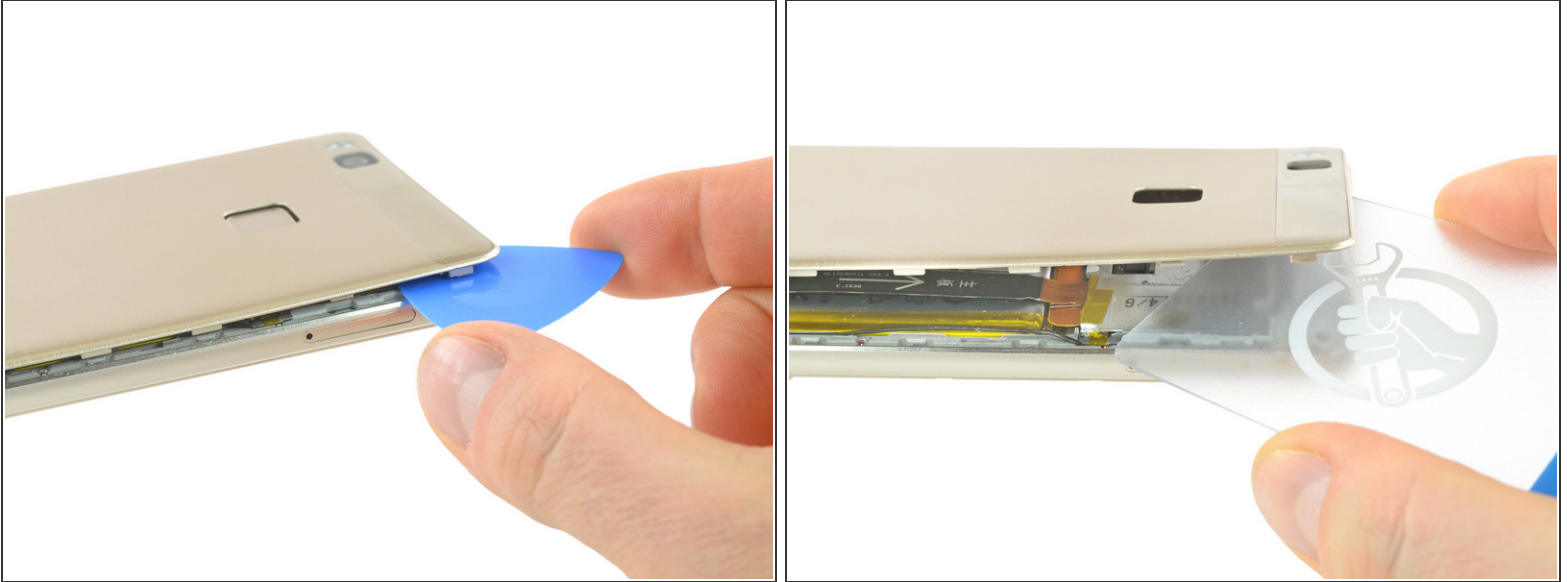



- When reaching the top right corner of the phone switch to a plastic card.
 - ① There is adhesive underneath the back cover that holds it to the battery and the metal plate at the top.
 - ⚠ Be careful with the flex cable at the right hand side.
- Use the plastic card to lever the back cover away and loosen it from the adhesive.

Step 3

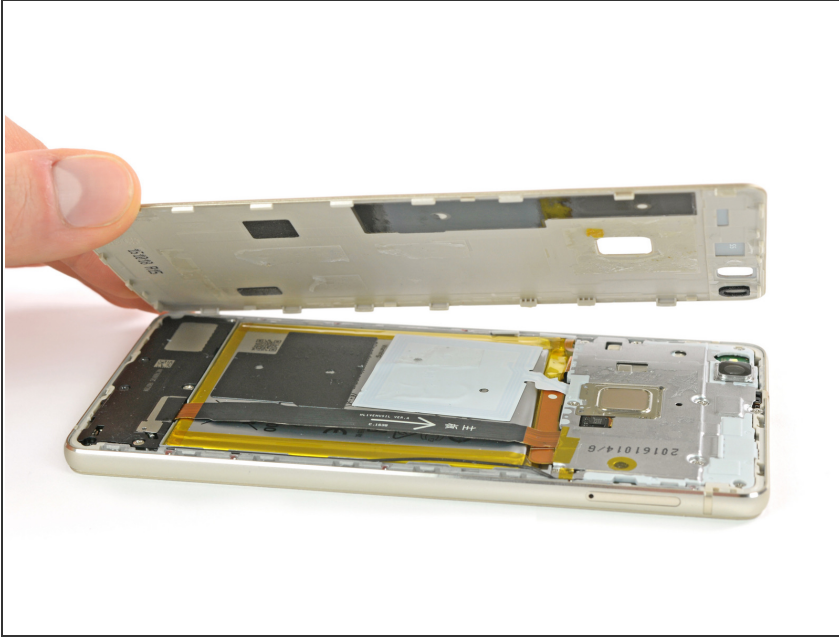


- When the back cover is freed from the adhesive you can pop it off by hand completely.

Step 4 — Fingerprint Sensor

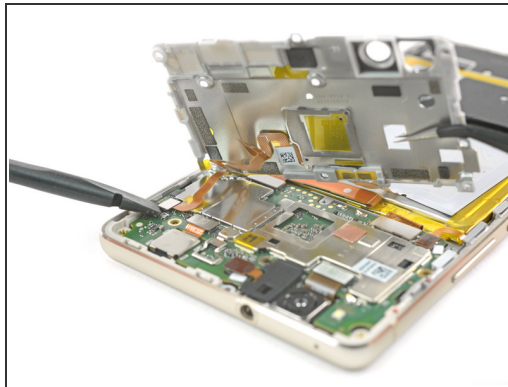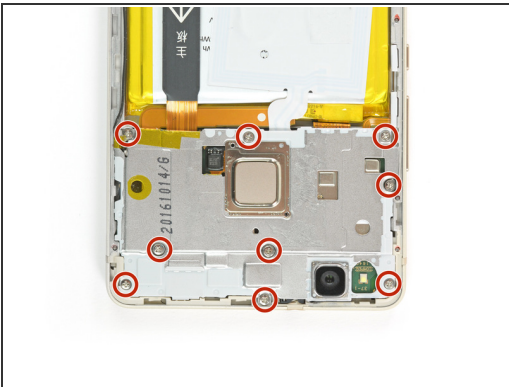

- Loosen the 9 Phillips #00 screws that hold the metal plate with the sensor.
 - ⓘ If there are any water indicators on top of the screws, take them off and set them aside.
- Unplug the fingerprint sensor connector from the motherboard.
 - ⚠ Don't take away the plate, yet. The NFC antenna is still glued to it.
- Peel off the the flex cable of the NFC antenna that is adhered to the metal plate.

Step 5 — Motherboard

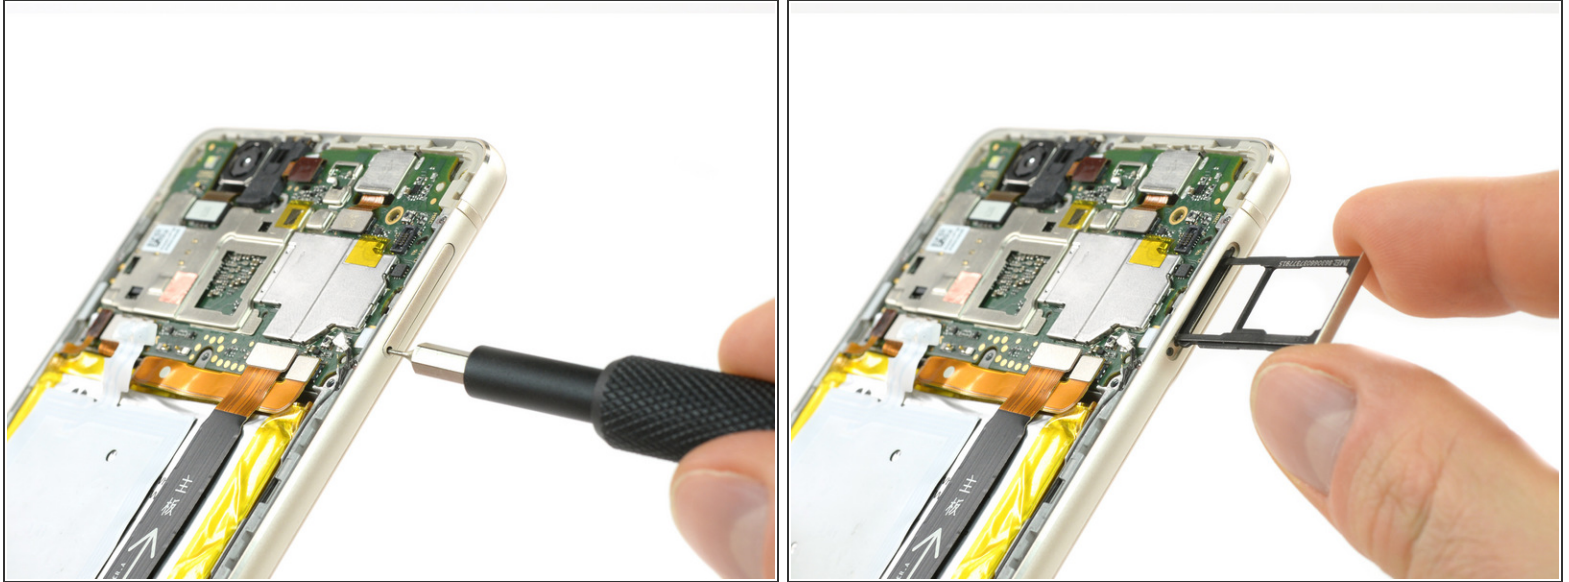

- Remove the SIM card tray.

Step 6



- Disconnect the motherboard flex, the battery flex and the antenna cable.

Step 7



- Disconnect the display flex and the power and volume button cable.

Step 8




- Unplug the rear camera and the headphone jack.

Step 9





- Take the camera and the headphone jack out of their recesses.

Step 10

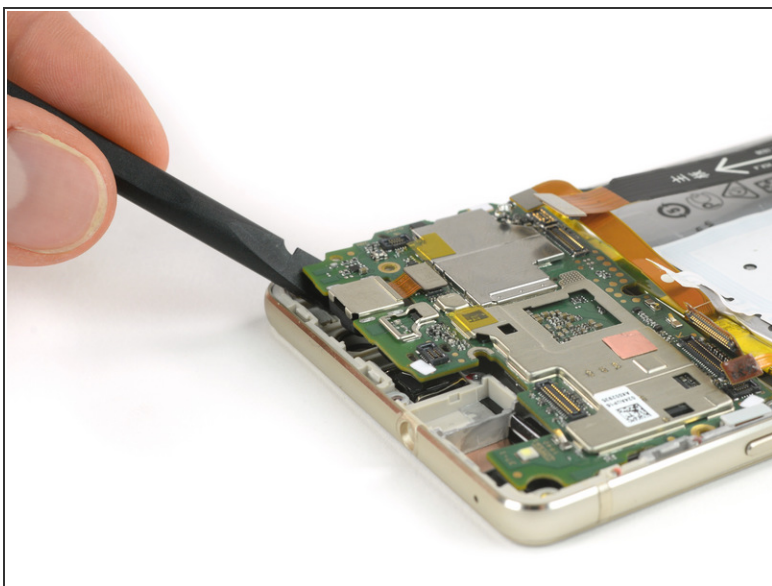

- Use a spudger to lift the motherboard carefully.
- Remove the motherboard including the front camera.

Step 11 — Front Camera

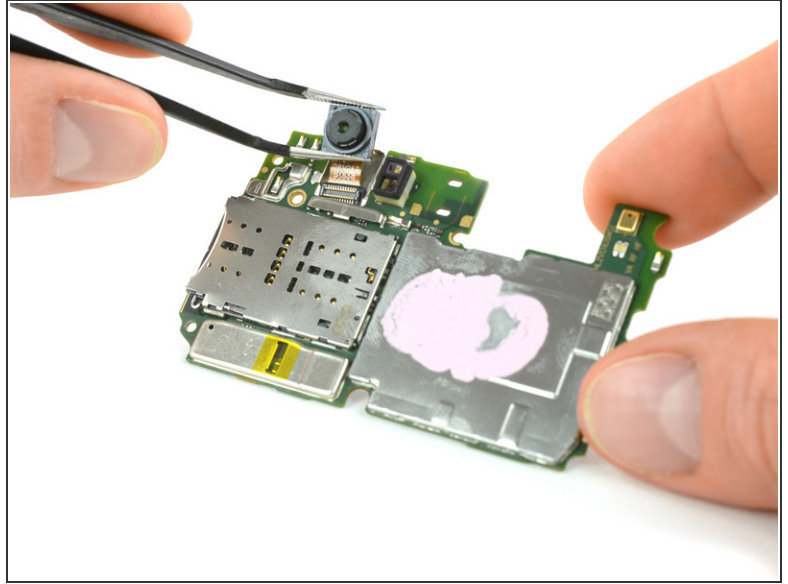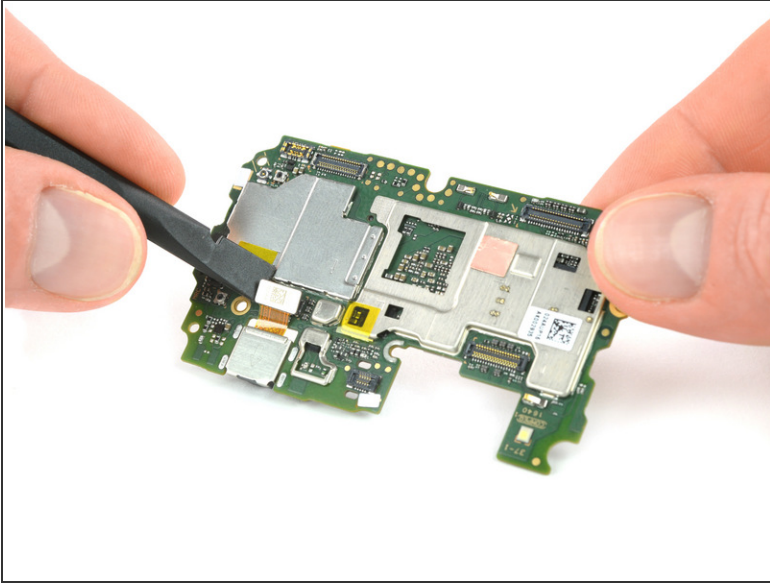

- Disconnect the front camera flex from the motherboard.
- Flip the motherboard over and thread the flex cable through the opening and take the camera away.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 12:15:14 AM.